Accessories VP-machines

O = optional ● = standard		VPO1	VPO2	VPE	VPS
Bars 35 mm for measuring ball inserts M2,5 or M4,0 or for Mahr inserts	•	0	0		
Bars 60 mm for measuring ball inserts M2,5 or M4,0 or for Mahr inserts		0	0	0	
Bars 35 mm for measuring pin inserts		0	0		
Bars 60 mm for measuring ball inserts	•	0	0	0	
Measuring ball inserts tungsten carbide available in 1 micron steps stepped, with M2,5 (from Ø1-7 mm) or M4 connecting thread (from Ø7 mm)	6 0	0	0	0	0
Measuring pin inserts, rocking and rotating		0	0	0	0
Stopping prisms for easier mounting of work pieces	F	0	0	0	
FRENCO-dial indicator with eccentric zero point		0	0	0	
Probe with "Haidenhain"-display	THE COURT COURT OF THE COURT OF	0	0	0	•
Setting rings and plugs		0	0	0	0
Flexible setting rings and plugs					0
Extension L-Dyn	Prediction of the Prediction o			0	0

Accessories VP-machines

O = optional ● = standard		VPO1	VPO2	VPE	VPS
Flexible bars 80 mm					•
Steel plate Ø250 with 3 air bearings, maintenance unit and button for compressed air					0
Stops for the steel plate on air bearings	4				0
Extension X2-axis					0